Getinge 46-series

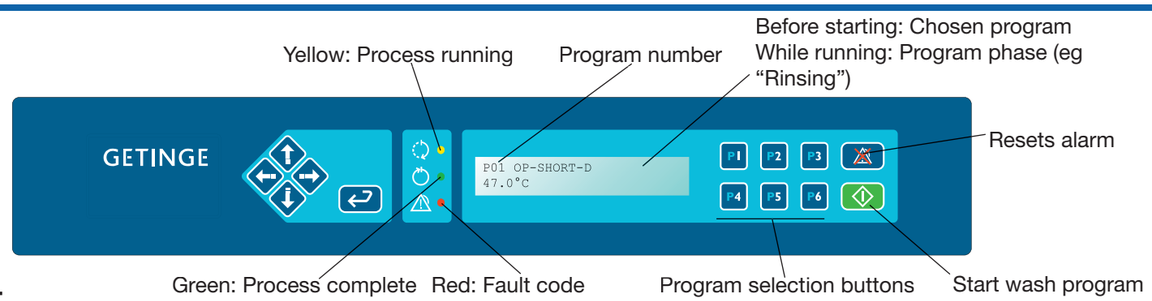

START

- Load the goods to be washed on to the wash trolley
- Run the trolley into the machine.
- Make sure that the spray arms can spin freely. Check docking and close the door.
- Choose a program.
- Start the machine by pressing ◇. For ten seconds, the program can be aborted by pressing ◇.

PROCESS COMPLETE

- When the process is complete, a green lamp lights up.
- Unload the machine
- Close the door.

HANDLING ALARM

“Add detergent 1” alkaline
“Add detergent 2” acid
“Add detergent 3” dose 3
“Add detergent 4” dose 4

All handling alarms are reset.

ACKNOWLEDGING A FAULT CODE

Acknowledge the fault code by:

- Note the fault code
- Cancel the acoustic signal by pressing ◇ . The machine remains locked but the program has been stopped. The display shows the password entry menu.
- Correct the fault or call service personnel.
- Enter the password (558387) using the arrow keys and press ↵.
  All liquid is drained from the machine and the soiled-side door is unlocked*.
- Open the door and remove the items.

* If the drain pump is faulty, water cannot be drained from the machine and the fault cannot be put right until the door has been opened. The soiled-side door is unlocked as soon as a the password is confirmed.

The items in the machine are not clean and must be washed again from the beginning with a new program.
If the items are still hot, handle them with care to avoid burns.

CLEAN HANDS ON CLEAN GOODS!

GETINGE